



**Ensure the BarTrack** BCM is plugged in





**Ensure the Cellular** Device is plugged into the USB port on the **BCM** 






Wait until you see a solid green light & a solid orange light illuminated before beginning the set up process



Scan QR Code





**Open Terms & Conditions MICRO MATIC** 

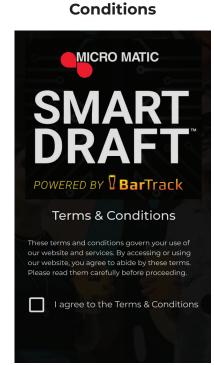



**Accept Terms & Conditions** 


1. Rev. 0

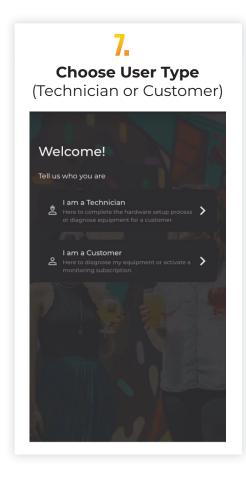


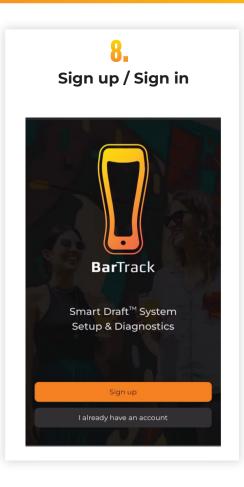

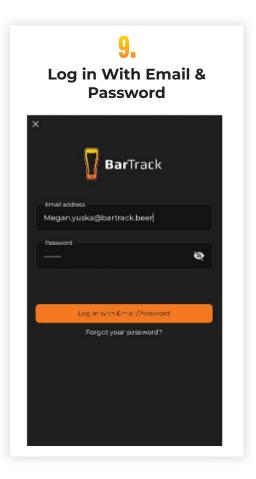


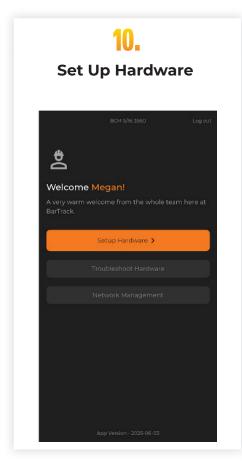


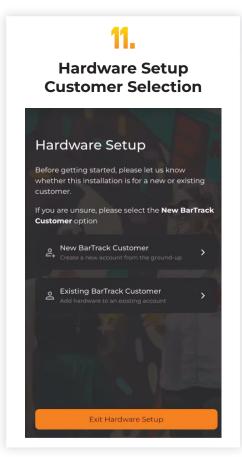


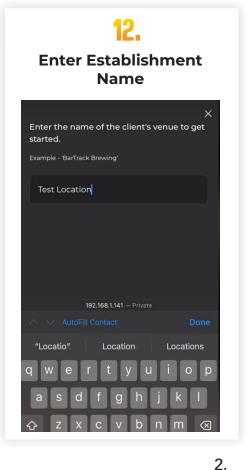



Rev. 0

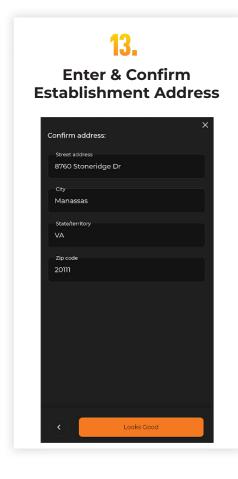


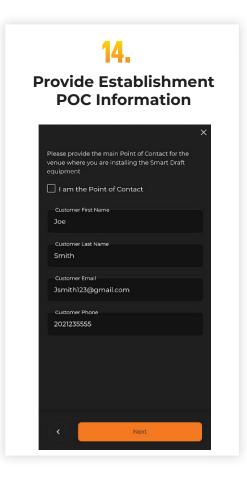

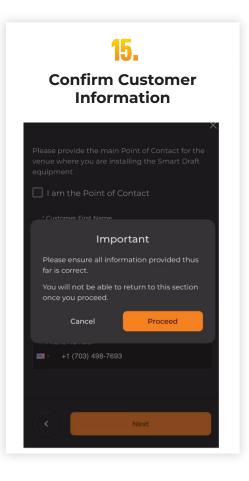


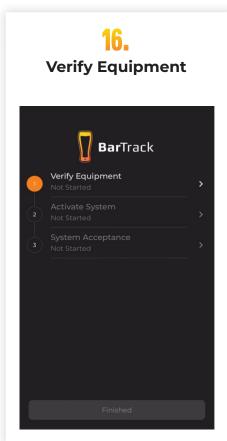


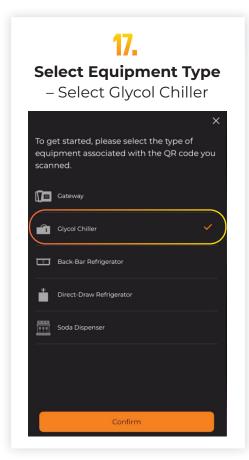


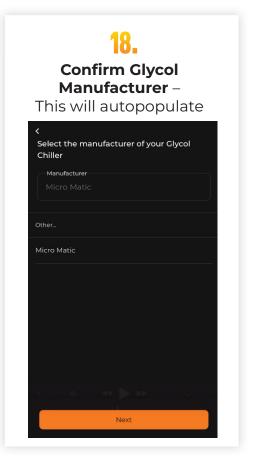



Rev. 0 3.

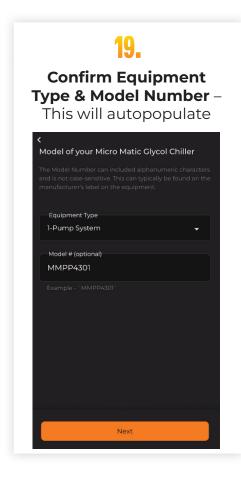


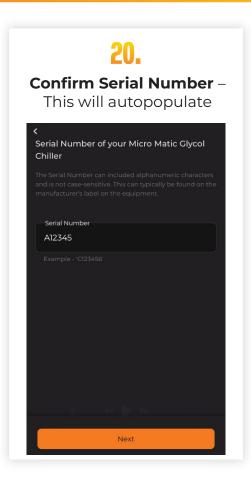

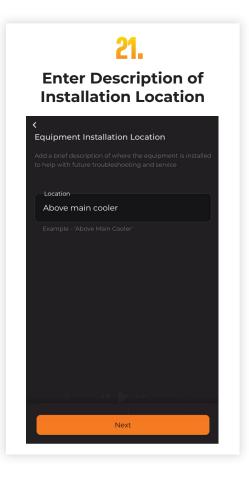


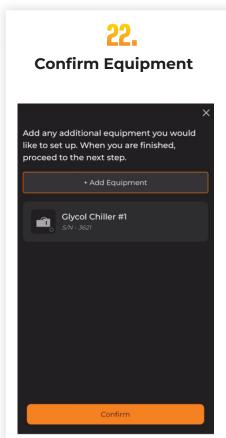


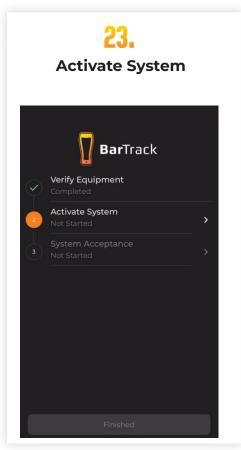


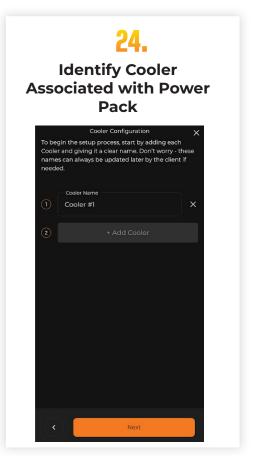



Rev. 0 4.

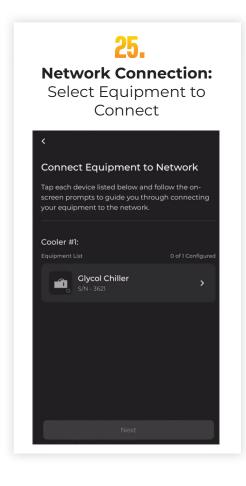


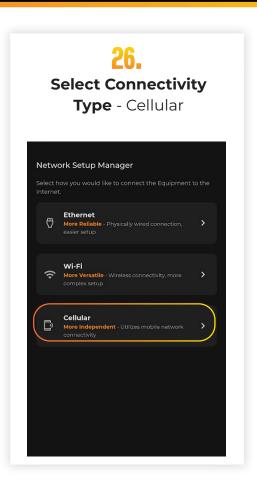

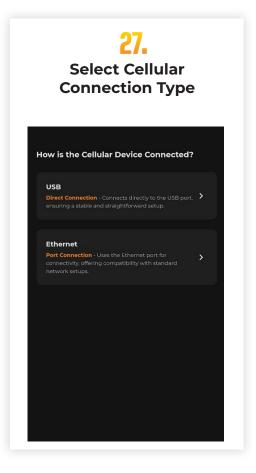


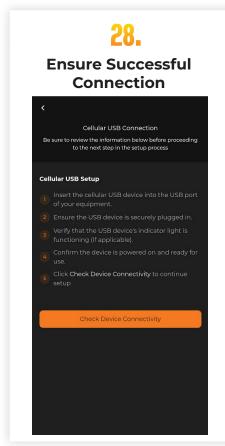


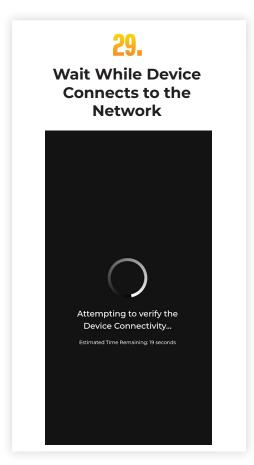


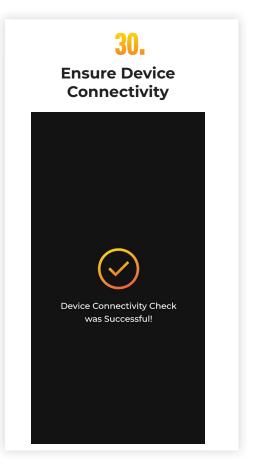



Rev. 0 5.

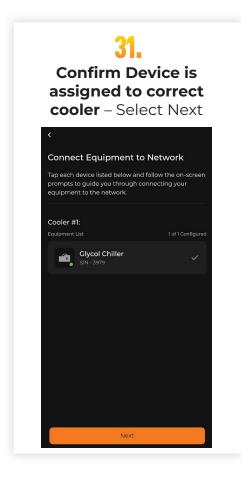

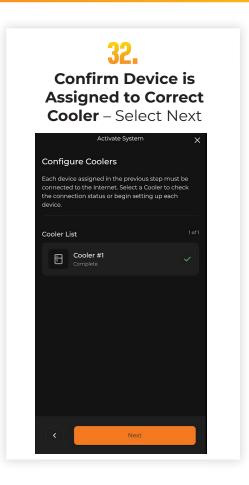

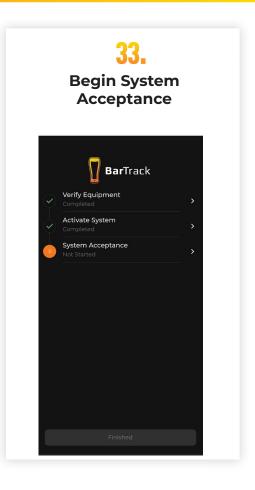

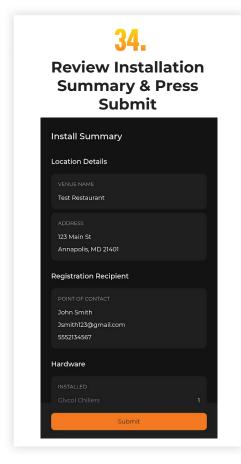

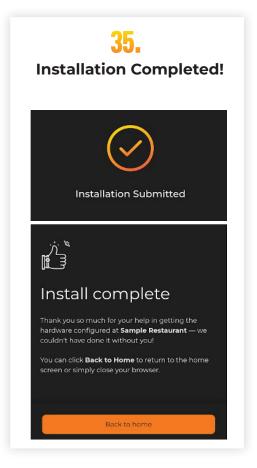

Rev. 0